

guarantee

This product is guaranteed against manufacturing defects from the date of purchase until the expiry of the relevant guarantee period shown below.

The guarantee is only valid if:-

1. The product has been installed, used and maintained in accordance with instructions and subjected to normal use only.
2. The defect is not due to use of an unsuitable or inadequate water or power supply.
3. The defect is not due to accident, misuse, neglect or repair other than by authorised agents or damage caused by foreign objects or substances.


Under this guarantee (which is non-transferable) we will, at its option, repair or replace free of charge any product (or replacement part) found to be defective. The guarantee does not extend to any consequential loss or damage. After repair or replacement the relevant guarantee period will be calculated from the original date of purchase.

We operate a policy of continuous product development and therefore reserves the right to change the product, packaging and documentation specifications without notice.

This guarantee is in addition to and does not affect your statutory rights as a consumer.

As part of our thorough testing process, all of our units are put through water testing before leaving the factory. Therefore, it is very likely your new item will have some water in it when it arrives

Single lever sink mixer general instruction

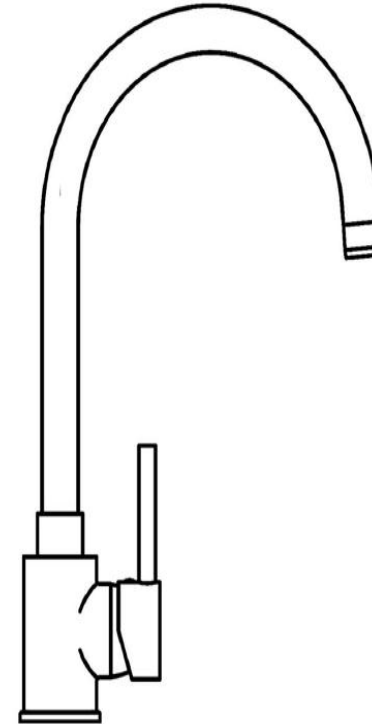

Single lever sink mixer

important - please read

Please read these instructions carefully before starting installation and keep for future reference.

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and will invalidate the guarantee.

We strongly recommend that you use a qualified and registered plumber.

general installation

These fittings are mixing devices and therefore water supplies must be reasonably balanced.

The fitting of isolating valves to the inlet feeds is advised for ease of maintenance.

Please take great care when installing this mixer not to damage its surface.

Please note if installing in an enclosed environment, access should be left for servicing and maintenance. No costs relating to inadequate access can be accepted.


care of the mixer

Our products are finished to the highest standard and due care needs to be taken to ensure their looks are retained.

We recommend cleaning all products with a soft damp cloth ONLY and advise strongly against the use of ALL cleaning products i.e. powders and liquids.

If the above instructions are not followed this will invalidate your guarantee in the event of a problem occurring.

operation

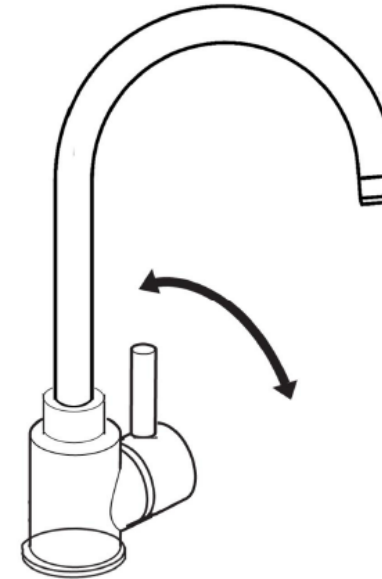

Move the mixer lever to the right to increase the flow of water.
Pull the mixer lever forward to increase the flow of cold water.
Push the mixer lever backwards to increase the flow of hot water.

Operating Specifications

Maximum operating pressure 5 bar

Minimum operating pressure 0.5 Bar

installation

Turn off the water supply.

Position the mixer onto the sink ensuring that the seal is fitted into the base of the valve.

From the underside of the sink fit a rubber washer onto the brass threaded fitting sleeve then the other rubber washer, finally fit the brass nut to the threaded sleeve and tighten up to the sink.

CAUTION: Do not over tighten the nut as this may damage the sink.

Before connecting to the water supply flush through the supply pipes in order to remove any debris.

Finally connect the red braided hose to the hot water supply (left) and the blue braided hose to the cold supply (right).

